

About how to install SD card for C24 Camera

Please use the tool to remove the 4 screws in the figure below



