

YUCHENG PTZ IP Camera Manual


(P25 SPEED DOME)

[Part 1: Connect and manage cameras using mobile APP]

Please go google play or Apple store download mobile APP,the name is Videolink and install it into your mobile phone,The first time you run the APP, (<http://www.esunstar.net/videlink-Download.html>).you need to register an account. You can use your email or mobile phone number to register an account, and then use the registered account to log in to the APP.

[1], Configure the camera using WIFI(If your camera has WIFI function)

1. Before connecting the power adapter of the camera, please make sure that the LAN port of the camera is not connected to the Ethernet cable (if you have connected it, please disconnect it and press the reset button for 5 seconds to restore the camera to factory settings). After connecting the power, wait 10 seconds.
2. Before using the mobile APP to configure the camera, please connect your mobile phone to your WIFI router via WIFI.
3. Open the APP and click the Add button to add a camera (as shown in Figure 1). And select WIFI (as shown in Figure2), the software will automatically obtain the WIFI of the mobile phone, and please enter the WIFI password (the WIFI connection password of the wireless router). Click Next (as shown in Figure 3)

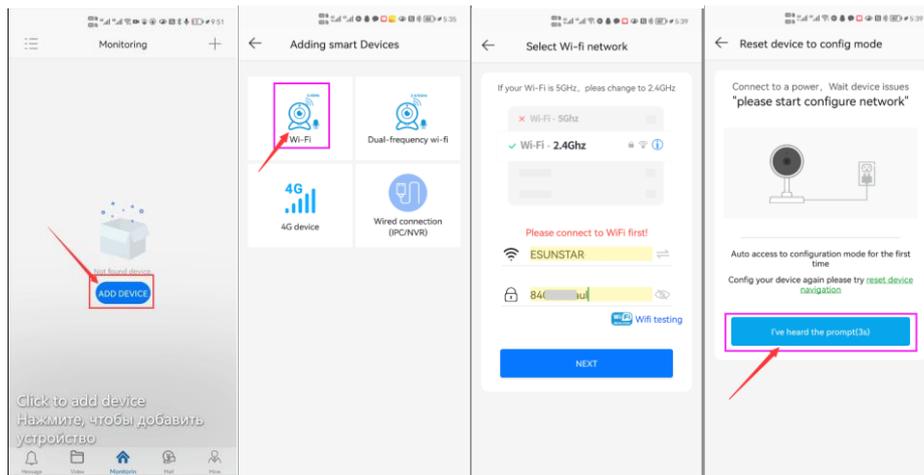


1

2

3

4

After entering the interface of Figure 4, wait for a few seconds, the APP will automatically enter the interface of Figure 5, and the camera will start to match the code through sound waves. When you hear a "di" on the phone, it means that the camera is successfully connected to your wireless router via WIFI (as shown in Figure 6). If your camera does not have a microphone and a speaker at the same time, the sound wave code matching cannot be completed, but you can also add the camera after aligning the QR code on the phone screen with the camera lens. Click the camera on Figure 7, and you will enter the camera's monitoring and management interface (as shown in Figure 8). The camera has been added successfully.

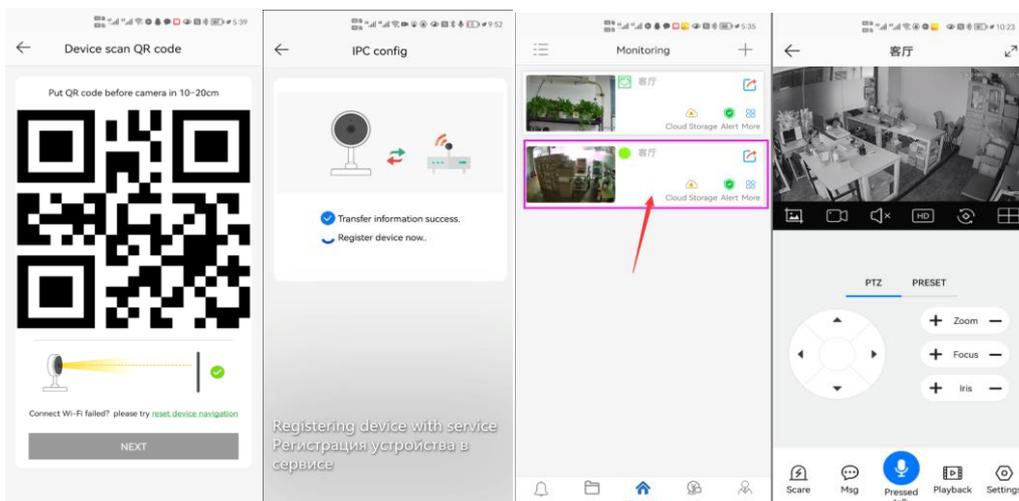

5


6

7

8

[2], Add a camera by scanning a QR code

please connect the ethernet cable to your switch/router and connect the power adapter. Select "Wired connection camera", as shown in Figure 9, enter the interface of scanning the QR code to add a camera, point the mobile phone at the QR code on the camera body to scan (as shown in Figure 10), after scanning is successful, please provide your Customize a name for the camera, and click "BIND IT" to complete the addition (as shown in Figure 12)

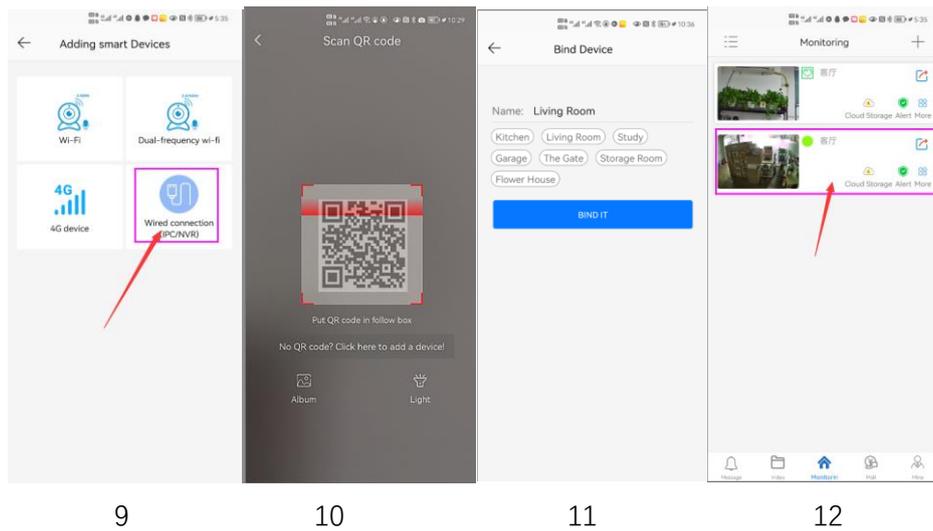

9


10

11

12

[3], Add cameras via LAN connection

If the QR code cannot be found on the camera, you can click "Click here to add a device" to add the camera through the LAN search (as shown in Figure 12), enter the search page, and the APP will automatically search for the camera, as shown in Figure 13 display, and then click the camera to complete the addition.

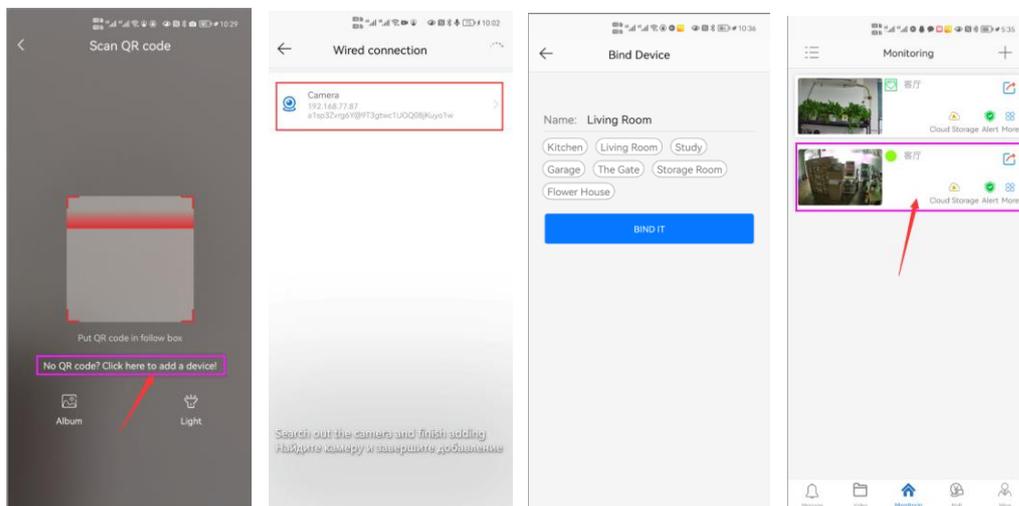


13

14

15

16

[4], How to Turn on/off auto humanoid Tracking

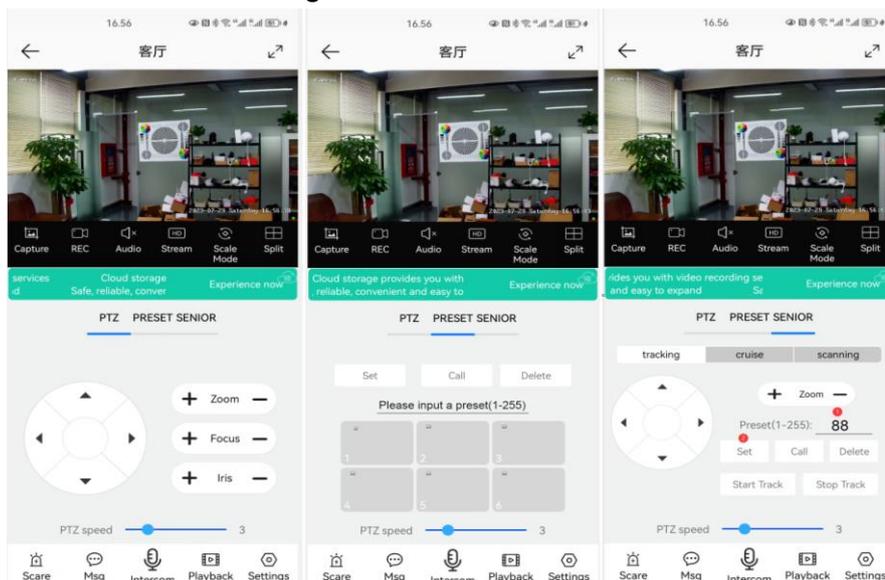

1


2

3

Fixed Position Tracking

1. Control the PTZ button to rotate the camera to your desired position (set a Return position)
2. Switch the PTZ control interface to "SENIOR" setting interface.
3. Click "Start Track" button, The camera will automatically turn on the tracking function
4. Click "Stop Track" button, the camera will automatically turn off the tracking function

Cruise tracking:

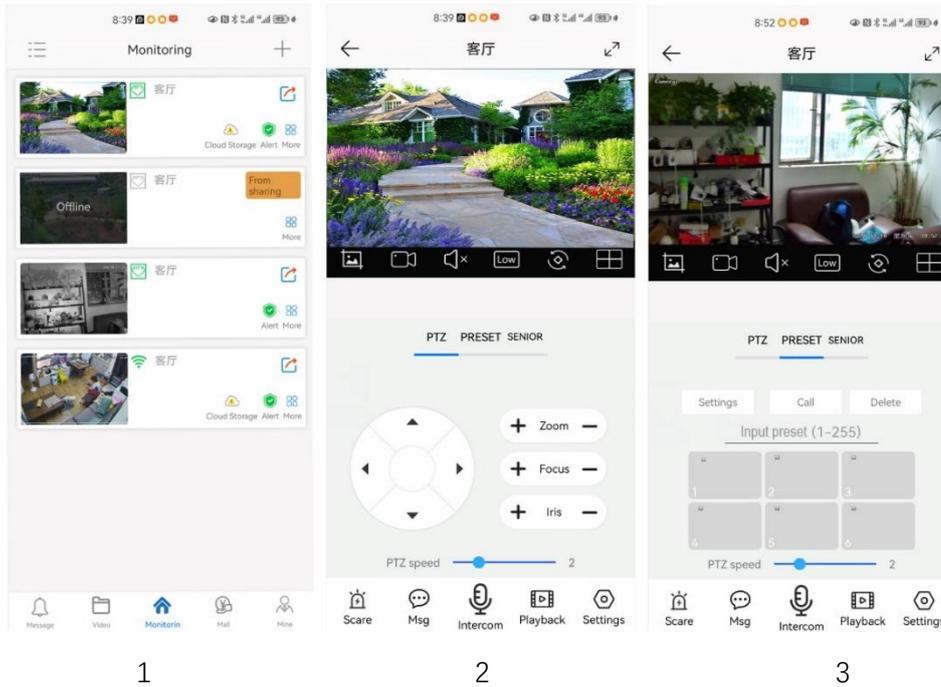

1

2

3

Before turning on cruise tracking, you need to set the camera's cruise point in "Preset". A maximum of 64 preset points can be set. These cruise points are the few locations you want to monitor. The camera will cruise back and forth between these locations to find a tracking target. Really made a camera monitors multiple angles of demand. Turn on cruise tracking function, The camera will cycle moving through the preset cruise points. When the person is detected, the camera will turn on the tracking. After the tracking is completed, the camera automatically resumes the cruise until the next time the person is detected, the tracking is turned on again

Set 1,2,3,4...max 64 preset position, Then call 98th preset camera will auto turn on cruise tracking. Setting method: [98]+[Call] for turn on cruise

Part 2: Add and manage cameras using PC software



All software and manual download weblink: <http://www.yucvision.com/videoink-Download.html>

Videolink camera software and manual download [Back to Home](#)

Download Videolink mobile APP

IOS	Android	HarmonyOS
 Download on the App Store	 Download on the Google Play	 Download on the HarmonyOS
Download	Download	Download

Manual Download:

Manual name	Pictures	Language	Weblink
Videolink mobile app Manual		English Russian Video Manual	Download Download Download
P2 series Camera Manual		English Russian	Download Download
4X ZOOM Auto tracking Speed Dome PTZ IP Camera		English Russian	Download Download
P02 series Camera Manual		English Russian	Download Download
P06 series Camera Manual		English Russian	Download Download
P07 series Camera Manual		English Russian	Download Download


PC software Download:

Software Name	Pictures	Language	Weblink
P05 series Camera Manual		English Russian	Download Download
P05 series Camera Manual		English Russian	Download Download
Search Tool		English Russian	Download Download
LAN PC manage software Support Simplified Chinese, Traditional Chinese, English, Korean, Polish		English	Download
WAN PCmanage software Videolink P2P PC software		English	Download

[SDK download: Please contact the developer to get it](#)

[1], Install search tool on your PC (http://www.yucvision.com/upload/file/AjDevTools_V5.4.2_20221024.exe)


1, Run "AjDevTools_V5.1.9_20201215.exe" and complete the installation

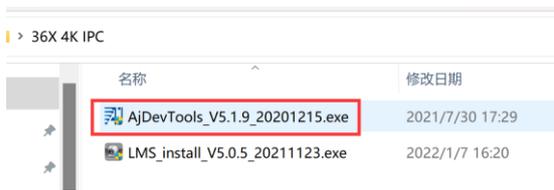

1




2

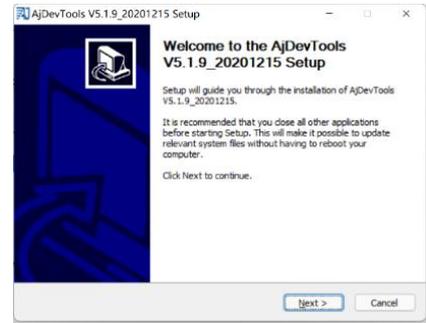


3

2, Run the software, as shown below (4)

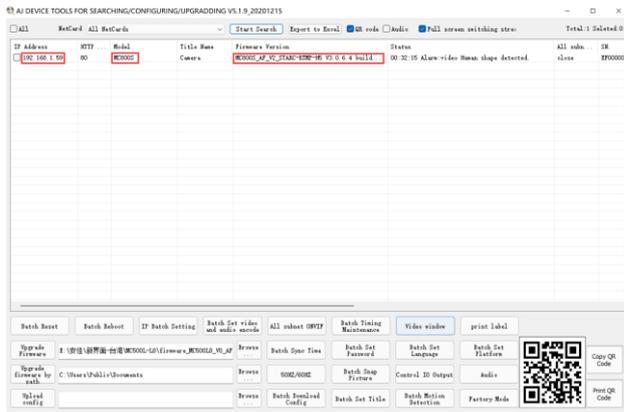


4

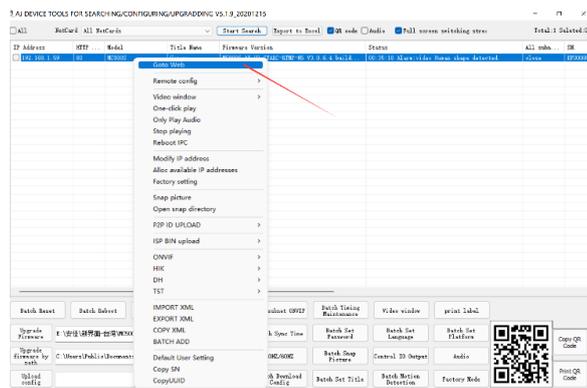

5

3, Here you can modify the IP address of the camera, upgrade the firmware and other parameter settings. Right-click on the IP address to open the camera with a browser, as shown in the figure 5.

4, Enter the browser login interface, login user name: admin, password: 123456, as shown in the following figure (if the browser prompts you to download and install the plug-in, please download and install it): Then click login, as shown in the figure 7

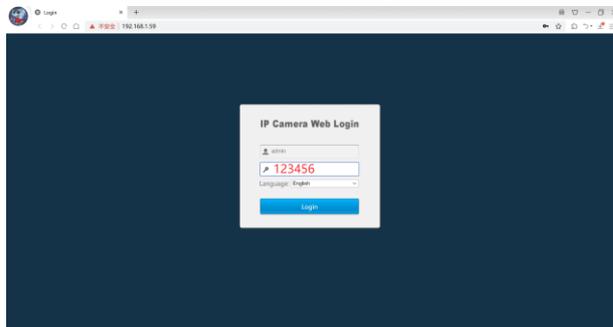


6




7

[2], Use PC software to search and add cameras ([http://www.yucvision.com/upload/file/LMS_install_v5.0.9_20220923\(KP\).exe](http://www.yucvision.com/upload/file/LMS_install_v5.0.9_20220923(KP).exe))

1, Install the LMS computer software.

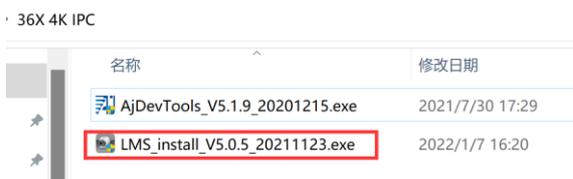

8

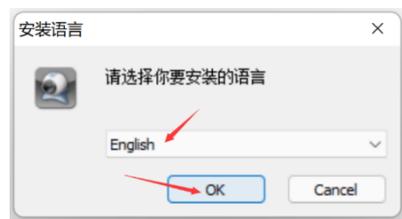


9

The software supports English, Simplified Chinese and Traditional Chinese (if you want to support other languages, we can provide you with language packs, you can translate into the language you want, and then we can provide you with software customization)

2, Follow the prompts to complete the software installation

3, Run the LMS software:user:admin,password:123456

Click LOGIN to log in to the software

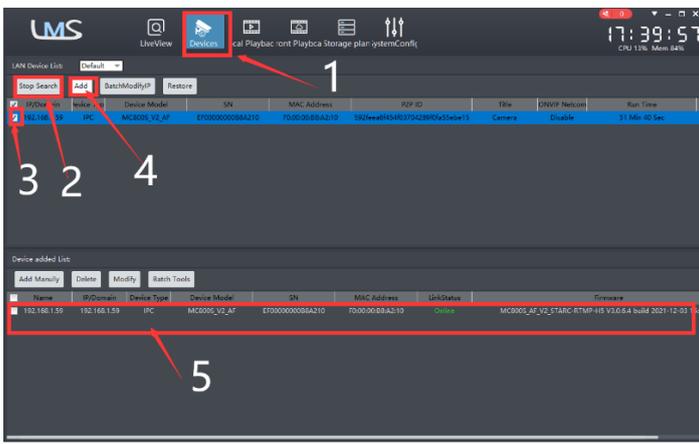

10



11

4. Search and add cameras.Click “Devices>””Start Search”>click“3”>add >successfully added, as shown in the figure 10

Then click “LiveView” go to Liveview, as shown in the figure 11

Double click on the IP address and the video will automatically appear in the video box on the right.

[3], Preview and control cameras with videolink PC software



1, Double-click the Videolink PC software in the directory, follow the prompts to complete the installation of the camera, and then run the camera. http://www.yucvision.com/upload/file/Videolink_install_V2.0.0_20230613.exe

2,run and login Videolink,

The username and password here are the account you registered for the first time on your mobile phone.

Click login button go to Videolink


You will see all the cameras under your account, you can preview the cameras and view the video playback in this way

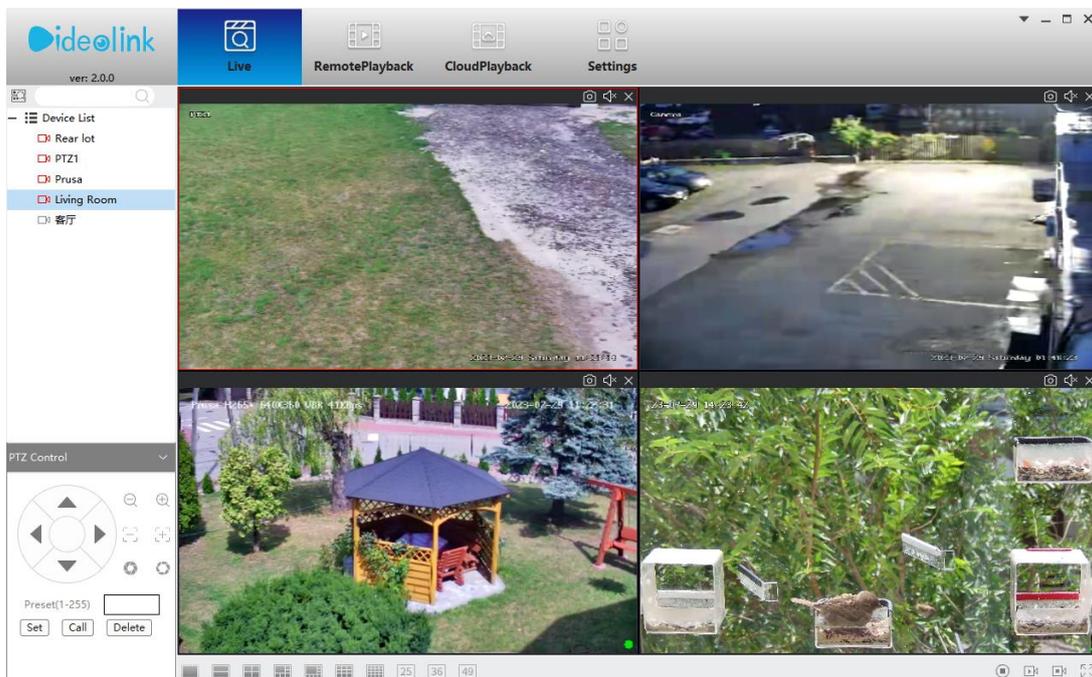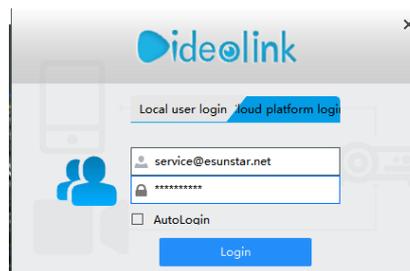

Part 3 [Function Operation and Description]

Professional name explanation: Settings/Add:set preset,

Call:Call preset, [N]+[set]=Enter N first and then click SET.“+”=Then

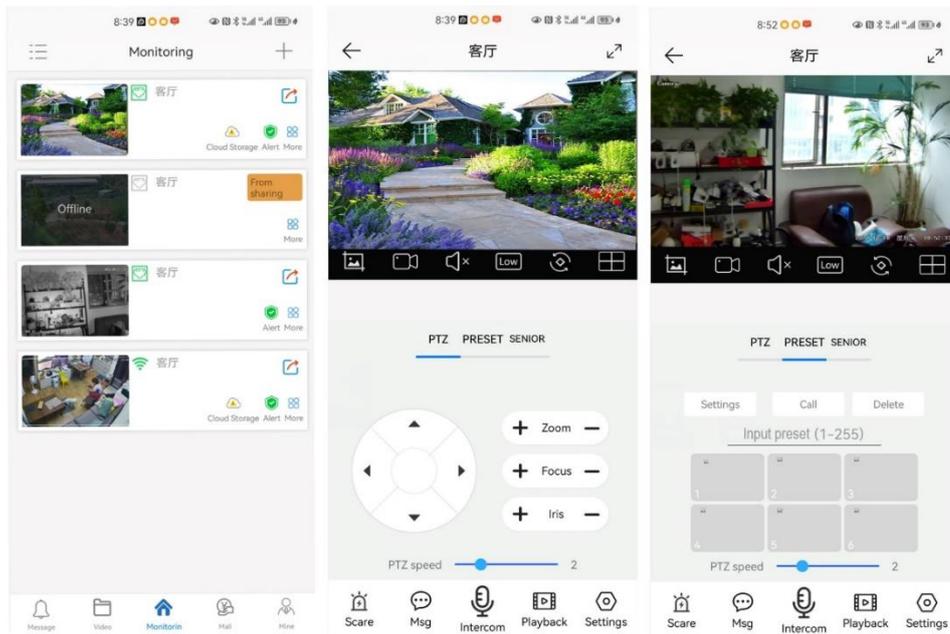

1.Preset settings

Rotate the camera to the position you want, then set this position to “N” preset

[N] +[SET] ,N is preset point, 1-255 number can be optional (But the command Preset isn't include). Set= set preset

2.Call preset(need set the corresponding preset point) : [N]+[CALL]

N for preset point, 1-255 number can be optional, camera can move to preset point after call, Zoom, focus and aperture lens will automatically change to preset parameters , camera preset display on the monitor.

3.Delete all preset point: [100] +[CALL] ,Call no.100 preset, clear the all preset :[1]+[0]+[0]+[CALL] .

4.Auto scan(Horizontal rotation)

[99]+[CALL], call No.99 ,the lever of 360 degree clockwise automatic scanning

5.The inspection group programming

Before you start cruising, you first need to set the preset position in the cruise path.**Please refer to “ 1.Preset settings”**

[101]+[CALL] for Open the first Cruise of 1-64 to scan ;

Modify the stay time of the Cruise:

[51]+[set] for Stay in the preset position for 4 seconds; [52]+[set] for Stay in the preset position for 6 seconds

[53]+[set] for Stay in the preset position for 8 seconds; [54]+[set] for Stay in the preset position for 10 seconds

[55]+[set] for Stay in the preset position for 12 seconds

Or :114+set+N+set, N=1-254 seconds, default N=5

6,Left and right area scan settings

The users can set left and right area point in the range of the rotation, the speed dome can return scan in setting range

[81]+[SET]: left limit; [82]+[SET]: right limit, [83]+[CALL]: start right and left area scan

Modify the speed of right and left area scan:

[60] +[SET]; 20% of the fastest speed; [61] +[SET]; 40% of the fastest speed; [62] +[SET]; 60% of the fastest speed

[63] +[SET]; 80% of the fastest speed; [64] +[SET]; 100% of the fastest speed

7.Idle action settings:The camera performs a certain function in standby mode

[106]+[call]:Turn on Idle action, [106]+[set]:Turn on Idle action

Idle action setting:

[201]+[call]:for 1th preset position (Home preset position);[102]+[call]:for 360 ° horizontal scanning

[103]+[call]:for limit scan scanning;[104]+[call]:for turn cruise

Modify idle action time:[117]+[set] +[N]+[set],N=1-254 (seconds),default N=90 seconds

8.Restore factory settings for Speed dome

[115]+[Call] for restore PTZ speed dome to factory setting

Part 5 Speed dome Command Table

Command Name	Function description	NO.	Call	Set
Tracking Command				
Set a Return Position	This position is the initial position where the camera starts tracking/the automatic return position after tracking:88+set	88		√
Turn on fixed-point tracking	Turn on tracking based on initial position:97+call	97	√	
Turn on cruise Tracking	Camera activation is based on preset position cruise tracking (some preset positions need to be set first (range: 1-32):98+call	98	√	
Turn off all Tracking	96+set	96		√
Idle action				
open idle action	106+call	106	√	
Settings idle action	201+call:for 1th preset position (Home preset position) 102+call:for 360 ° horizontal scanning 103+call:for limit scan scanning 104+call:for turn cruise		√	
Turn off Idle action	106+set	106		√
Modify manual control Speed	113+set+N+set, N=1-64, default N=64	113		√
360°Pan scanning	99+call	120	√	
Modify Pan scanning	111+set +N+set, N=1-64,default N=40	121		√
Area scanning				
Set Left Border	Set the leftmost position of area scanning , 81+set	81		√
Set right Border	Set the rightmost position of area scanning , 82+set	82		√
Turn on area scanning	83+call,	83	√	
Modify Area scan speed	Modify Area scan speed , 141+set+N+set, N=1-64, default N=6	141		√
Cruise				
Turn on cruise	101+call	101	√	
Modify cruise speed	115+set+N+set, N=1-64, default N=50	115		√
Modify cruise dwell time	Modify the dwell time at each preset position :114+set+N+set, N=1-254 seconds, default N=5	114		√
Turn on speed ratio	the larger the ZOOM, the slower the rotation speed(default)	106	√	
Turn off speed ratio	ZOOM changes, rotation speed remains unchanged	106		√
Reboot speed dome	34+call	107	√	
Reset speed dome	40+call	40	√	
Del all preset	33+call	33	√	
LENS reboot	107+set+64+call	107		√